



## Software Update

**WARNING : When updating the Software the Meizu Miniplayer will format it, so please save any data on the Miniplayer first.**

### 1. Connect your Meizu Miniplayer to your computer:

In order for your Meizu Miniplayer to be recognised by your computer, please follow these steps:

- The Meizu Miniplayer must be charged.
- Turn the Meizu Miniplayer on by holding down the play button for 5 seconds. (It is located on the upper edge of the Meizu Miniplayer.

- Connect the Meizu Miniplayer to a computer using the USB cable.

After a few seconds the Meizu Miniplayer will be recognised as a "removable disk".

Gain access via "My Computer".

NB: If the Meizu Miniplayer is switched off while connected to a computer, it will only charge.

### 2. Meizu Miniplayer Update.

- Download the update available at [www.danedigital.com](http://www.danedigital.com), under the "support" heading, by indicating the path of the file that Meizu has created for this operation.

- The downloaded update file is a compressed file.

It is crucial to decompress the file using a suitable program before proceeding with the update.

- Go to the Meizu folder, decompress the downloaded file.

You will find two files: M6.EBN and resources.bin

- Copy the two files acquired to the root of the removable disk represented by the Miniplayer.
- Disconnect your Meizu Miniplayer, and then turn it off (by pressing the 'Play' key for 3 seconds).
- Turn on your Meizu Miniplayer (by pressing the 'Play' key for 3 seconds) and let the update run (~ 3 min). The Meizu Miniplayer will automatically shut off once the update is completed. Then simply turn it on again to end the update.



MEMORY IS EVERYWHERE

More info at  
[www.dane-elec.com](http://www.dane-elec.com)